

INSTALLATION INSTRUCTIONS FOR BOLLARD SERIES

**WARNING: DISCONNECT POWER BEFORE INSTALLATION OR SERVICING.
READ INSTRUCTIONS CAREFULLY-FAILURE TO DO SO COULD
RESULT IN PERSONAL INJURY. RETAIN INSTRUCTIONS FOR SERVICING.**

FIXTURE INSTALLATION

1. UNPACK LUMINAIRE AND CHECK FOR DAMAGE.
2. PLACE BASE (A) OVER ANCHOR BOLTS
SECURE BASE WITH WASHERS (B) AND NUTS (C).
IF NECESSARY USE SHIMS (BY OTHERS) TO LEVEL BASE.
3. MAKE WIRING CONNECTIONS PER LOCAL & NEC CODES.
4. PLACE FIXTURE DOWN-OVER-BASE, LINING UP
THREADED HOLES IN BASE WITH COUNTERSUNK
HOLES IN FIXTURE HOUSING.
5. INSERT 1/4-20 FLAT HEAD SCREWS (D), TURNING UNTIL
HEAD OF SCREWS ARE FLUSH WITH SURFACE OF
HOUSING.

BEFORE ENERGIZING MAKE CERTAIN THAT:

-LINE VOLTAGE CORRESPONDS TO BALLAST
PRIMARY VOLTAGE.


-LAMP IS TYPE AND WATTAGE SHOWN ON
SERIAL LABEL.

NOTE: LAMP (BY OTHERS) MUST HAVE ENVELOPE TYPE E-T7.

-FOR BEST LAMP CONTACT IN SOCKET, TIGHTEN
LAMP, LOOSEN THEN RETIGHTEN.

RELAMPING INSTRUCTIONS

1. REMOVE ALLEN SOCKET SCREW (E) AND
SEALING WASHER (F).
2. REMOVE HOUSING CAP (G).
3. REMOVE BRACKET BY REMOVING (2) 1/4-20 NUTS (H).
4. UNSCREW DEFUSER GLOBE (J) COUNTER-CLOCKWISE.
5. REPLACE LAMP
6. REVERSE ABOVE PROCEDURE TO RE-ASSEMBLE
FIXTURE BEING SURE SEALING WASHER IS ON
SCREW. NOTE: HEAD OF SCREW WILL NOT BE
FLUSH WITH TOP OF HOUSING DUE TO SEALING
WASHER. DO NOT OVERTIGHTEN TOP ALLEN HEAD
SOCKET SCREW.

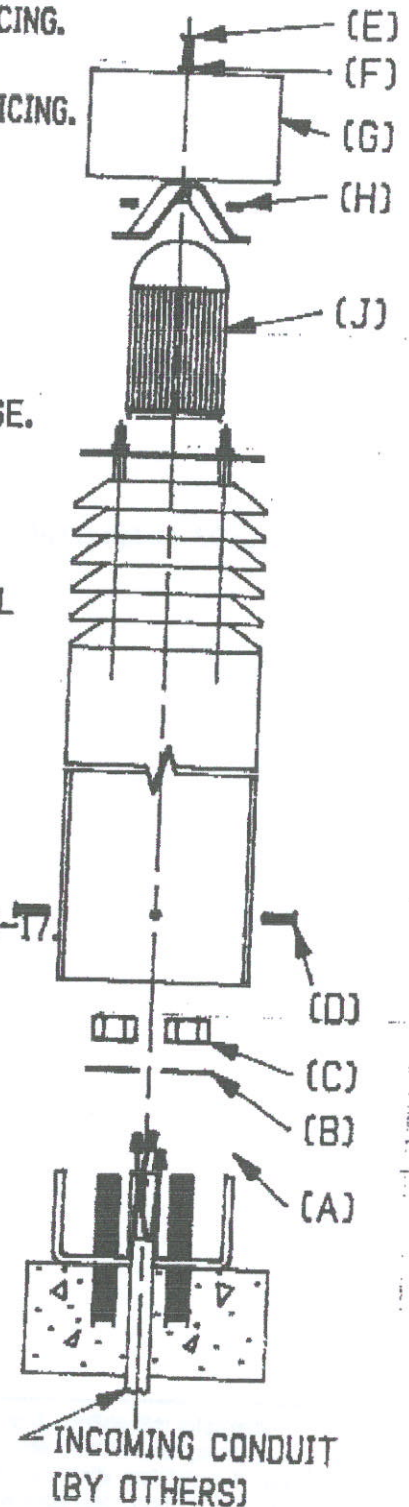

74375A01
SHEET 1